

Mobile phone



Please read the **Owner's Manual** to learn more details on the functional description of your mobile phone.

quick start guide

INTRODUCING YOUR PHONE



KEY FUNCTIONS

Application tab

- Touch and slide **APPLICATION TAB** upward or downward to bring up/close the applications window.

Menu key

- Press **MENU** to open a list of actions you can take on the current screen or function.
- Press & hold **MENU** to open/close the keyboard shortcut.
- Press any key to wake up, and then press **MENU** key to unlock the screen (you need to draw your unlock pattern first if have set one.)

Back key

- Press **BACK** to go back to the previous screen, or to dismiss a dialog box or menu.

Call key

- Press **CALL** to do one of the following, depending on the context:
 - ☞ Press to answer a call.
 - ☞ Press to open the log of recent calls.
 - ☞ Call contact (when a contact/contact number is highlighted).
 - ☞ Add another call (while in a call).
 - ☞ Call number (when a phone number is highlighted, e.g., in Browser).

End call key

- When on a call, press **END CALL** to hang up.
- When not on a call, press **END CALL** to lock the screen and put the phone to sleep.
- During options programming or web browsing, press **END CALL** to go back to home screen display.

Home button

- During options programming, menu or web browsing, press **HOME** to return to the home screen display.
- Press & hold **HOME** to display the recent applications that you have launched.

Power On/Off key

- Press **POWER** to turn on the phone.
- From anywhere during phone operation, press & hold **POWER** to open the context menu, from which you can power off or put your phone in silent mode.

Volume keys

- Press either + or - button to open the sound volume controls. Volume is controlled separately for the incoming call ringer and audio/video files:
 - While receiving incoming call, press either (+) or (-) to silence the ringer.

 
INSTALL SIM, SD CARD, AND BATTERY

Your Subscriber Identity Module (SIM) card identifies you to the wireless network. Your phone will not work without the SIM card.

To insert the SIM, SD card, and battery:

- 1 Prepare both your SD and SIM card.
- 2 Pull the SIM/SD card cover open by inserting your fingernail on the slot and then rotate the cover to reveal the SD and SIM card slot.
- 3 Insert the SD and SIM card:
 - To insert an SD card, push the card into the slot, copper contacts facing down and with the notched edge facing left. Push the card in gently until it “snap” into place.

- To insert a SIM card, push the card into the slot, copper contacts facing down and with the cut corner facing right. Push the card in gently until it “snap” into place.

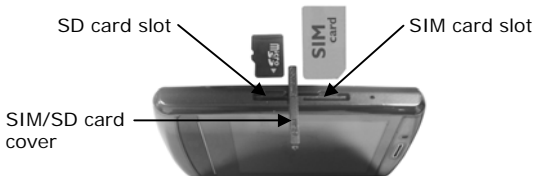

To remove the cards, press the card in and release.

- Close the SIM/SD card cover until both ends are seated.
- Insert the battery. Make sure that the metal contacts on the battery aligns with the metal contacts on the phone.
- Replace the back cover. Push both ends until the locking tabs clicks into place.

POWER ON/OFF

To turn on the phone, press **POWER** button.

To power off your phone, press & hold **POWER** button. On release, the phone options menu opens. Select **Power off** and then **OK**.

 
CUSTOMIZE YOUR HOME SCREEN

The Home screen actually extends beyond the screen width. Touch and slide your pen left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications, shortcuts, and widgets.



Create Home screen shortcuts and widgets

- 1 From the Home screen, touch & hold the screen with your pen. The Add to Home menu opens.
- 2 Select an Application shortcut, a Shortcut to some of your saved information (such as play list, Web bookmark, or folder), Widget (a clock, picture frame, or Google search bar), or Wallpaper for your Home screen.
- 3 The application, shortcut, folder, or widget appears on the screen.

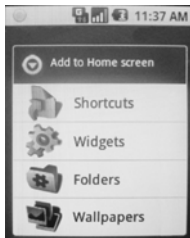

Tip: To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application icon. While holding the icon, the application tab will close leaving the icon behind. Place the icon into your desired position in the home screen.

Remove items from the Home screen

To remove a shortcut or widget from your Home screen, touch & hold the item to enter "move mode". The application tab turns into a Trash button. Drag the item to the Trash button and release. You'll know when your item is in the Trash because the item and the tab will turn red:

Move objects on the Home screen

- 1 To move an icon or other item on the Home screen, touch & hold it to enter move mode. The object will magnify when it's ready to be moved.



- 2 Without lifting your pen (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

Customize Home screen wallpaper

- 1 Touch & hold the Home screen to open the Add to Home menu.
- 2 Select **Wallpaper**, then select either **Pictures** or **Wallpaper gallery**.
- 3 **If you select Wallpaper gallery**, then scroll through the gallery.
 - Touch a thumbnail to highlight it and view a larger version.
 - When you've decided on a wallpaper, make sure it's highlighted, then select **Set wallpaper**.
- 4 **If you select Pictures**, your picture album opens.
 - Navigate to find the picture you want to use, then select it.
 - The cropper appears. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.
 - When you're happy with the cropped area, select **Save** or press **BACK** button.

CALL FUNCTIONS

Make calls

- 1 From anywhere on your phone, press **CALL** key.
- 2 Touch one of the following tabs:
 - **Dialer**: Touch the numbers on the screen and press **CALL** key.
 - **Call log**: Touch an entry on the list to call.
 - **Contacts**: Touch the contact and tap the phone number to call.
 - **Favorites**: Touch the contact and tap the phone number to call.



Answer calls


To answer a call, press **CALL** key.

End calls

To end a call, press **END CALL** key.

Adjust volume: While in a call, press either **VOLUME UP** or **DOWN** key to open the sound volume control. Press respective keys repeatedly to adjust the sound volume to your desired level.

CONTACTS

To view the contacts, press **HOME** and select **Contacts** . You can also press **CALL** key and select the **Contacts tab**.

Contacts belonging to a specific group are listed in the Contacts tab. Only those contacts you star as “favorites” are listed in the Favorites tab.

Browse through your contacts by sliding your pen up and down on the screen. Rapid brush movement in either direction accelerates the scrolling. Touch the screen to stop the scrolling.

A quick way to find a contact is to use the “quick scroll” tab. As soon as you start scrolling with your pen, the quick scroll tab appears on the right, connected to the scroll bar. Select, then drag the tab up or down to scroll through the alphabet rapidly. Release your pen when the first letter of the name you’re looking for appears. You’ll jump to that point in the list.

Add contacts

- 1 From anywhere on your phone, press **CALL** key.
- 2 Touch the **Contacts tab**.
- 3 Press **MENU** key and select **New contact**.
- 4 Input the contact’s information; name, number, email address, assign a ring tone etc.
- 5 Press **MENU** key and select **Done**.

Display contacts

To select which contact group to display in Contacts, press **MENU** key and select Display group. Select from the following:

- **All contacts** - to display all contacts you have created or that has been added automatically.
- **Contacts with phone numbers** - to display only contacts with phone numbers.
- **My contacts** - to display your recent contact list.
- **Starred in Favorites** - to display all contacts you stored as favorites, including contacts that you frequently called.

BLUETOOTH® SETUP

Your phone comes with Bluetooth technology, which is a wireless technology that enables a data connection between your phone and a Bluetooth wireless headset.

Prepare a Bluetooth wireless headset

To pair your phone with a Bluetooth headset, make sure that your headset is fully charged and that you put the headset into pairing mode. See your Bluetooth headset's manual for more information.

Turn on the Bluetooth feature and pair with a headset

- 1 On the Home screen, press **MENU** key.
- 2 Touch **Settings**.
- 3 Touch Wireless controls and then select **Bluetooth** to turn it on.
- 4 Touch **Bluetooth settings**.

Your phone scans for available Bluetooth devices.

 
- 5 Touch the headset to select it.
- 6 Slide open the display to reveal the keyboard and type the PIN if needed.
- 7 Touch **OK**.



WIFI

Your phone can connect to Wi-Fi networks. To connect:

- 1 On the Home screen, press **MENU** key.
- 2 Touch **Settings**.
- 3 Touch Wireless controls and then select **Wi-Fi** to turn it on.
- 4 Touch **Wi-Fi settings**. Your phone scans for available Wi-Fi networks.
- 5 Touch the Wi-Fi network that you want to connect to.
- 6 Input the log in password.
- 7 Touch **Connect**.

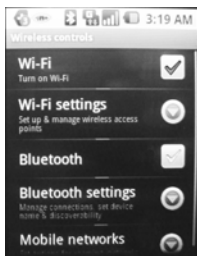

Note: The Wi-Fi consumes large amount of battery power when connected. To prolong the charge life of your battery, always turn Off the WiFi application when not in use.

EMAIL

You can setup your Gmail account mailbox to get updated with arriving email, compose and send an email through your mobile phone.

For information on how to set up the Gmail feature, please see "Setting your email account" section of your Owner's Manual.

Read e-mail messages

- 1 From the Application tab menu display, touch Email application icon



to display your Inbox.

- 2 Touch the message to open and display the content.

Compose and Send an e-mail message

- 1 Open the Application tab menu display and touch Email application



icon to display your Inbox.

- 2 Press **MENU** key and then select **Compose**.

- 3 Type a name or e-mail address in the To: field. Matching contacts will appear (If email address is saved on the contact information). Select the contact or continue typing.

 
- 4 Scroll the page upward and touch the **Subject** field.

- 5 Type the subject.

- 6 Scroll the page upward and touch the **Compose Mail** field.

- 7 Type your message.

- 8 Touch **Send**.

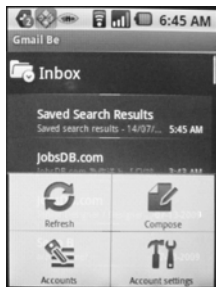

To add Copy recipient and Blind copy;

- Press **MENU** key and then select **Add Cc/Bcc**. Input the recipient email address in the Cc and Bcc fields.
- Touch **Send**.

To add a picture attachment;

- Press **MENU** key and then select **Add attachment**. Phone will display the picture gallery. Touch the picture you want to attach.
- Touch **Send**.


IMPORTANT NOTICE

 
- Your phone comes with a 'stylus' pen that you can use with touch screen operations. If for some reason the pen is not available, you can also use your finger. But in order to ensure an effective operation of your phone, please **touch the screen with your fingertip.**
- The WiFi consumes large amount of battery power when connected. To prolong the charge life of your battery, **always turn Off the WiFi application** when not in use.
- Most feature of your phone require access to the internet. In the absence of WiFi connection, it utilizes the GPRS service to download and upload files over the net and the operating cost will be expensive. To avail with cheaper GPRS connection, please **subscribe for 'GPRS service package'** from your local Network provider.
- To avoid your SIM card from getting damaged, **Do not remove the SIM** while phone is turned on.

SMS AND MMS MESSAGING

MMS Message

Pictures taken with the camera are stored on the memory card. Make sure the memory card is in the phone before you use the camera.

- 1 On the Home screen, touch Messaging icon .
- 2 Touch **New message**.
- 3 Press **MENU** key.
- 4 Touch **Attach**.
- 5 Touch one of the following options:
 - **Pictures** - to send a picture you have already taken. Touch the picture that you want to attach.
 - **Capture picture** - to take a new picture and send. Frame the subject and touch the shutter. Touch Attach.
 - **Videos** - to send a video file. Touch the video file that you want to attach.
 - **Audio** - to attach one of the preloaded audio files. Touch the file you want to attach and touch OK.
 - **Slideshow** - to attach multiple pictures and text. Touch Slide 1. Touch Add picture and then touch the picture that you want to add.
- 6 Slide open the display to reveal the keyboard.
- 7 At the **To:** field, start typing the phone number. Your contacts list appears.
- 8 Touch the desired contact or continue typing the phone number.
- 9 Touch the text entry field and type your message.
- 10 Touch **Send**.

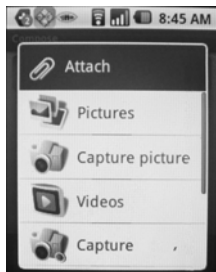

Text Message

With text messaging, all your messages on the same subject are threaded together into conversations. The inbox includes picture and text messages.

In the messaging window, touch the message to display it's content.



MMS and GPRS Access Point Name (APN) setting

Before using the GPRS and MMS function of your phone, first setup the 'Access Point Names' data. The GPRS and MMS connection require separate setting of APN, please call your SIM network to get more information.

- 1 On the Home screen, press **MENU** > **Settings** > **Wireless controls** > **Mobile networks** > **Access Point Names**.
- 2 From APN display, press **MENU** and then touch **New APN**. You need to setup two sets of APN, one for GPRS and the other for MMS connection. Set the GPRS APN as the default.
- 3 Touch the corresponding access option and then input the data.
- 4 Press **MENU** and then touch **Save**.

Edit access point setting example:

	GPRS	MMS
Name	CMCC	cmwap
APN	cmnet	cmwap
Proxy	<Not set>	10.0.0.172
Port	<Not set>	80
Username	<Not set>	<Not set>
Password	<Not set>	<Not set>
Server	<Not set>	<Not set>
MMSC	<Not set>	http://mmsc.monternet.com
MMS proxy	<Not set>	010.000.000.172
MMS port	<Not set>	80
MCC	460	460
MNC	02	02
APN type	Default	mms

Note:


The data filled in the above setting is only for sample data entry reference. The data are based on the setting when using China Mobile SIM network.

Different SIM network provider will have their own APN settings, please call your SIM network to get more details.

WEB BROWSING


Go to your home page

 
The Browser always opens to the last Web page that you have viewed. The first time you enter the Browser after powering on, your home page will display.

- 1 On the Home screen, touch Browser icon .
- 2 Your home page will display.




Change your home page

- 1 On the Home screen, touch Browser icon .
- 2 Press **MENU** key and touch **More**.
- 3 Touch **Settings**.
- 4 Scroll up the page to select **Set home page**.
- 5 Touch the `http://` field to reveal the keyboard. Type the site address and then touch OK.

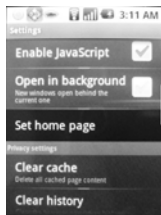

Visit Web pages

- 1 On the Home screen, touch Browser icon .
- 2 Touch the input field to reveal the keyboard. Type the Web address.
- 3 Press **MENU** key and touch **Go**.

TO INSTALL/UNINSTALL A SOFTWARE APPLICATION

 
Your phone supports an application in "*.apk" format that can be downloaded from the web, but please take extra caution when doing so as payment or some restrictions may apply.

Note: The *.apk (Android package file) software application that can be downloaded from the internet is designed to operate in general use, our company could not guarantee that all features can work well in your phone.


Download the software in the internet

- 1 With your pc (personal computer) connected to the internet, browse and search for software application with extension file name as *.apk
- 2 Download the file into your pc drive directory.
- 3 With the use of a card reader, copy the *.apk to your phone SD card.
- 4 Insert the SD card into your phone and then turn it on.

Note: After turn on and the phone is in the home screen, select the **Unknown sources** (Allow install of non-Market applications) option by pressing **Menu > Settings > Applications**.

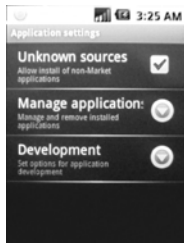

Install the software to your phone

- 1 Open the Application tab and then touch **OI File Manager** icon .
- 2 Browse the SD card memory and go to the directory where you have stored the *.apk file.
- 3 Touch the application *.apk file.
- 4 Follow the installation instruction as shown on the screen.
- 5 After setup has completed, touch Done. You are now ready to use the newly installed software application. Open the **Application tab** and then touch the software icon to operate the new application.

 


Uninstall the software from your phone

- 1 In the home screen display, press **Menu > Settings > Applications > Manage applications**.
- 2 Select the application software that you want to remove.
- 3 Touch **Uninstall**.


Note: The built in software programs that are installed into your phone does not have the Uninstall option and therefore cannot be removed.


- 4 Follow the uninstall instruction prompt.
- 5 Touch **Ok**.

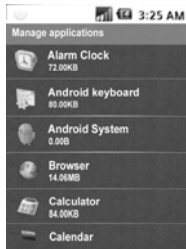

INSTANT MESSAGING


Adding your Messenger account

 - 1 Open the Application tab menus and then touch **IM+** icon .
- 2 Touch **Add Account**, or press **MENU** and then select **Add Account**.
- 3 Select the messenger service you want to configure. This application supports AOL, MSN, Yahoo, Google Talk, Jabber, ICQ, and MySpace messengers.

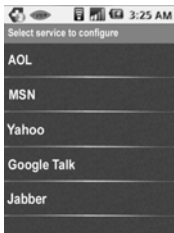


- 4 Input your Login name, password. Also, you can select the option to sign in automatically when IM+ starts.
- 5 Touch **Save**.
- 6 Follow steps 1~4 to enter more accounts.


Connecting your Messenger account

 
- 1 Open the Application tab menus and then touch **IM+** icon .
- 2 Touch **Accounts**.
- 3 Touch the Messenger account and then select **Connect** on the context menu.
- 4 When connected, press **MENU** and then select **Contacts**. Touch Friends or General folder to display your friends list.

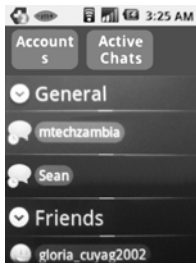


- To sort and display only your online friends, select **Hide offline contacts**. In your contacts display, press **MENU > Settings > General**.
- To add a new contact, press **MENU >More > Add Contact**.



 
Send message to your friends

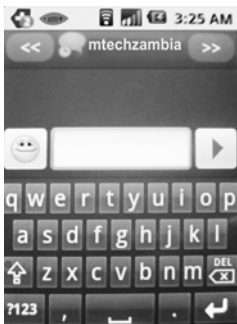- 1 Open the Application tab menus, touch IM+ icon .
- 2 Connect your messenger Account/s.
- 3 Press **MENU** and then touch **Contacts**.
- 4 Touch **Friend** or **General** contacts to reveal your friends list and see who is currently online.
- 5 Touch the name display of your friend.
- 6 In the message editor, start typing your message.



- To enter an emotion icon into your message, touch  and then select your desired picture from the list.
- To switch back to other online friends, touch  or  to select the name.

- 7 Touch Send  to send out your message.

To exit the IM+ application

On the **IM+** application window, press **MENU** and then touch **Exit** to end and exit the application.